

Mango-M32F2 GPS 모듈 연결 방법

<http://www.mangoboard.com/>

<http://cafe.naver.com/embeddedcrazyboys>


Crazy Embedded Laboratory

Document History

Revision	Date	Change note


1. PIN MAP 및 연결 방법	4
--------------------------	---

1. PIN MAP 및 연결 방법

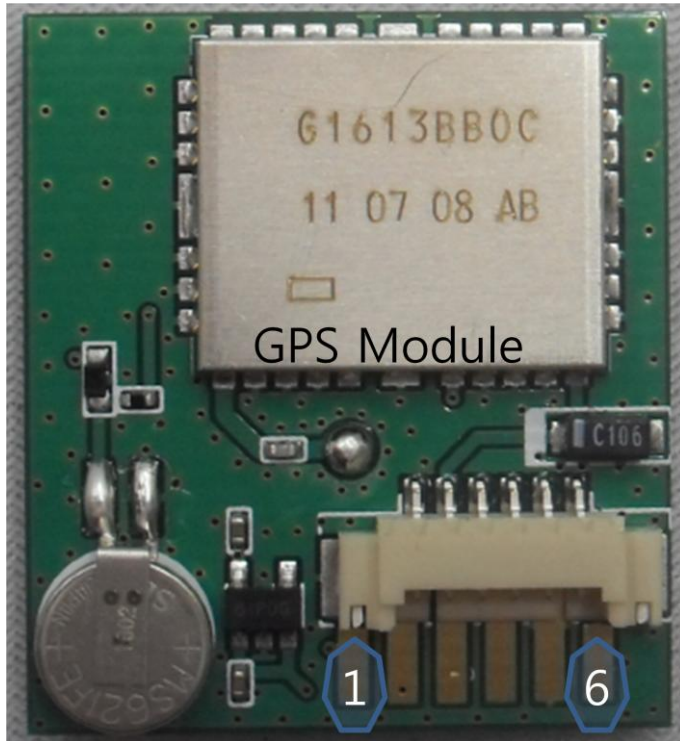

GPS Pin Description

No	Name	In/out	Remark
1	RESET	NC	
2	VCC	IN	GPS main Supply. Typ. 3.3V
3	TX0	OUT	Serial Data Output
4	RX0	IN	Serial Data Input
5	GND		Ground
6	BOOT	NC	

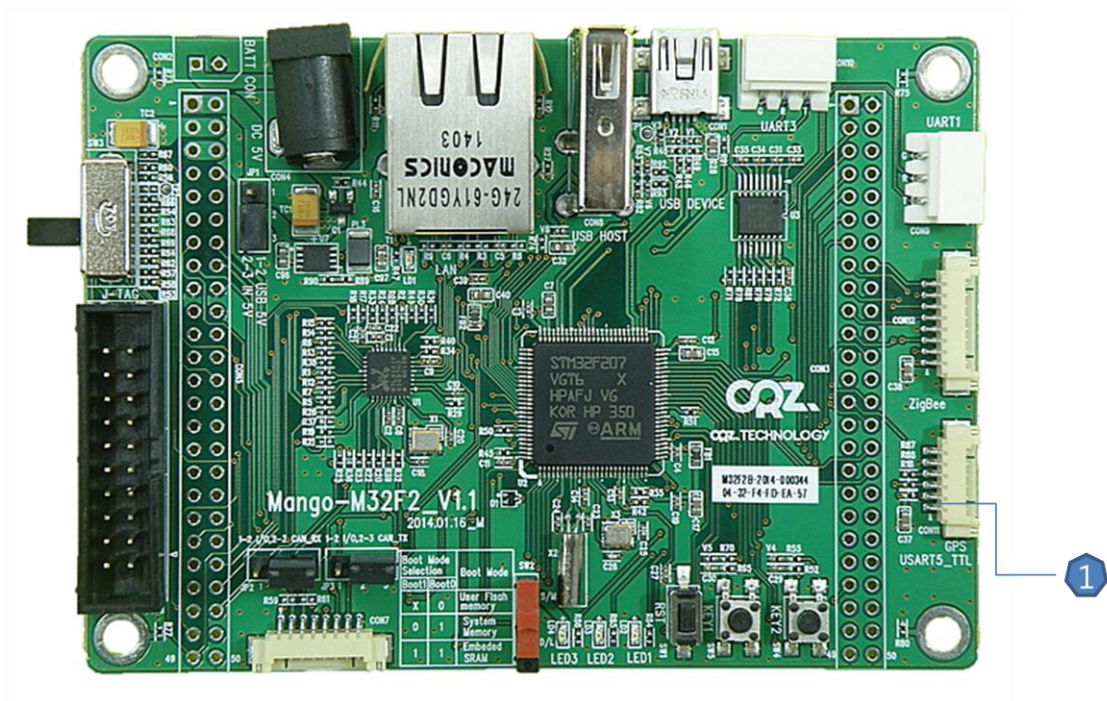

Mango-M32F2 Pin Description

No	Name	In/out	Remark
1		NC	
2	VDD_3_3	OUT	Main Voltage Supply
3	UART5_RX	IN	Serial Data Input
4	UART5_TX	OUT	Serial Data Output
5	GND		Ground
6		NC	

Mango-M32F2와 GPS Module 연결 방법

