

CRZ S3C6410

Mango_R6410_Manual

<http://www.mangoboard.com/>

<http://cafe.naver.com/embeddedcrazyboys>

Crazy Embedded Laboratory

Document History

Revision	Date	Change note
1.0	2011.05.23	Initial 전종인
1.1	2011.06.07	문서분류 TECH추가

목차

1.	S3C6410 Mango-R6410 Transfer image to target.....	4
1.1.	WinCE.....	6
1.1.1.	WinCE Image Download.....	6
1.1.2.	WinCE Image Write.....	7

1. S3C6410 Mango-R6410 Transfer image to target

1.1. NOR Download

1.1.1. NOR Falsh image Download and Reference

참고 및 다운로드: <http://cafe.naver.com/embeddedcrazyboys/5244>


참고 : <http://cafe.naver.com/embeddedcrazyboys/5234>

mango64-nor.tcl 다운로드 :

mango64-openocd-cygwin-v01-002-image.zip



1.1.2. NOR Flash Write

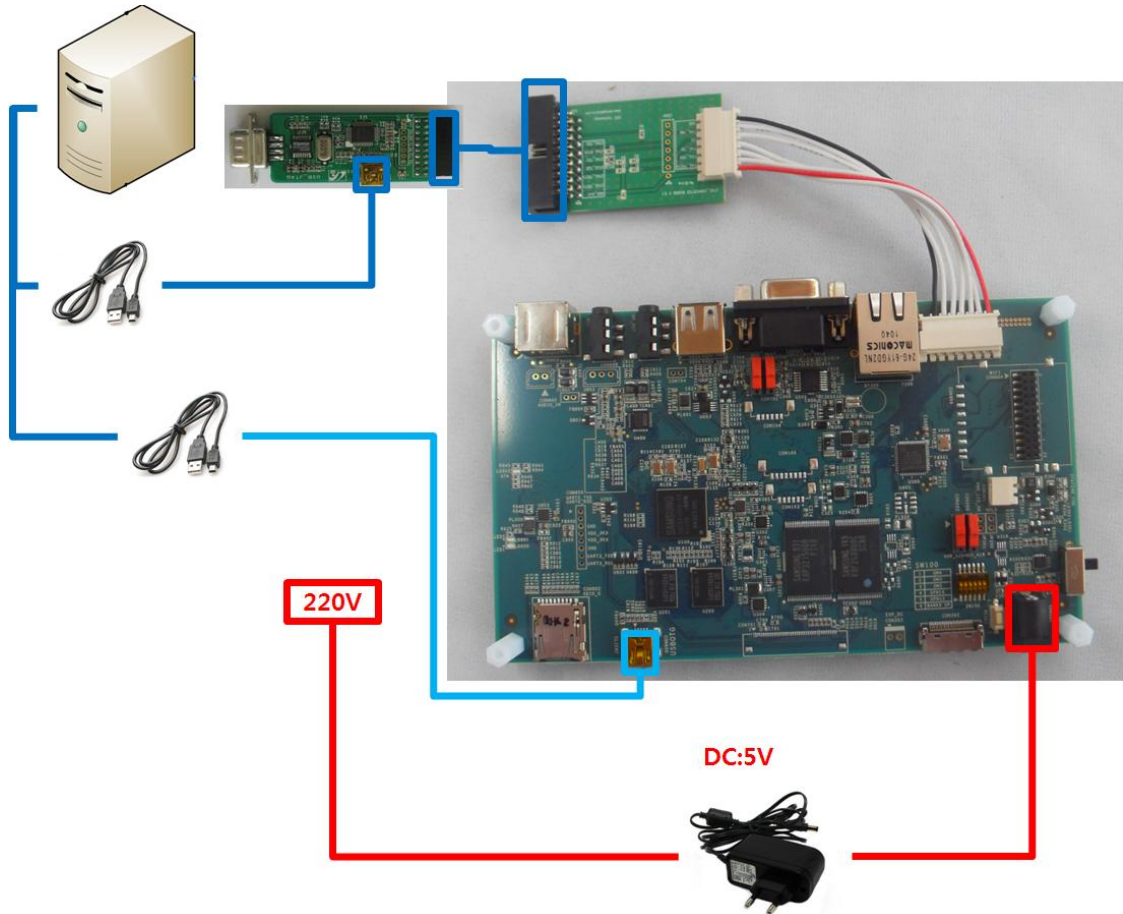

USB OTG 및 FT2232 USB JTAG 연결 NOR Boot Mode 설정 후 DC 전원인가
Openocd .exe 파일이 있는 위치에서 Dos Command 창 실행
openocd.exe -f mango64nor.cfg 입력

```

C:\WINDOWS\system32\cmd.exe - openocd.exe -f mango64nor.cfg
C:\Documents and Settings\jooyoung\My Documents\Downloads\mango64-openocd-cygwin
-v01-002-image>openocd.exe -f mango64nor.cfg
Open On-Chip Debugger 1.0 (2009-04-30-01:48) svn:1547

BUGS? Read http://svn.berlios.de/svnroot/repos/openocd/trunk/BUGS

$URL: svn://svn.berlios.de/openocd/trunk/src/openocd.c $
jtag_speed: 5
1000 kHz
Info : JTAG tap: s3c6410.unknown tap/device found: 0x2b90f0f (Manufacturer: 0x7
87, Part: 0xb900, Version: 0x2)
Info : JTAG Tap/device matched
Info : JTAG tap: s3c6410.cpu tap/device found: 0x07b76f0f (Manufacturer: 0x787,
Part: 0x7b76, Version: 0x0)
Info : JTAG Tap/device matched
Info : found ARM1176
Warn : no telnet port specified, using default port 4444
Warn : no gdb port specified, using default port 3333
Warn : no tcl port specified, using default port 6666

```

다른 Dos Command 창 실행 후

telnet localhost 4444 입력

```

c:\ 텔넷 localhost
Open On-Chip Debugger
>

```


script mango64-nor.tcl 입력

1.2. WinCE


1.2.1. WinCE Image Download

7inch binary


<http://crztech.iptime.org:8080/Release/mango64/wince/mango64-7inch-binary.zip>

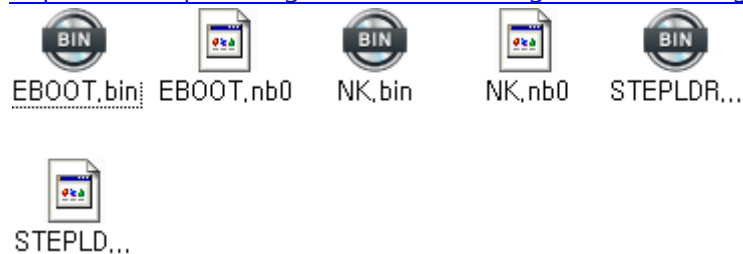


1.2.2. WinCE Image Write

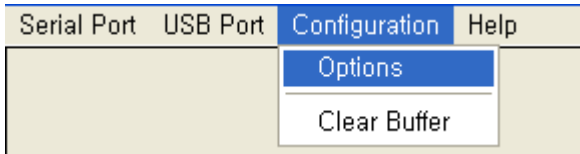


DNW 실행 후 menu에 Configuration에 Options에 들어갑니다.

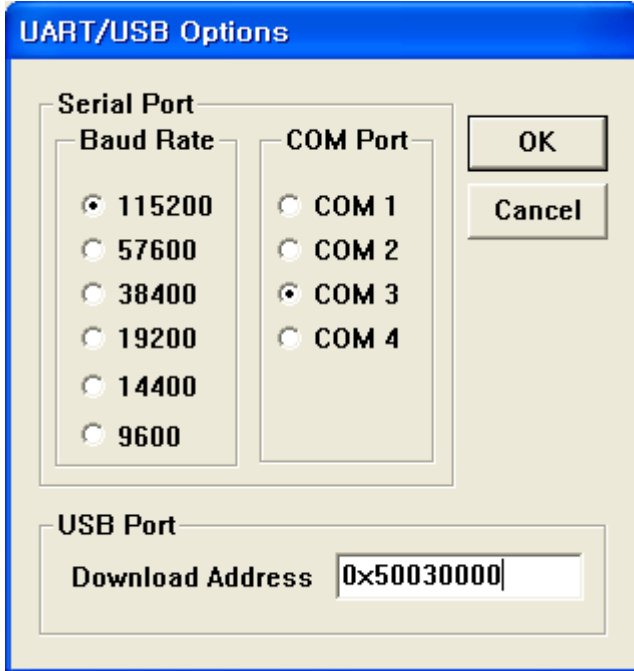


위와같이 UART/USB Options창이 뜨면 UART PORT값을 설정을 하고 Download Address값을 0x 50030000값으로 설정

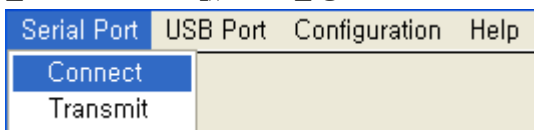


그후 Meun에 Serial Port> Connect를 클릭해줍니다. 그후에 보드를 NOR모드로 한후 파워 인가

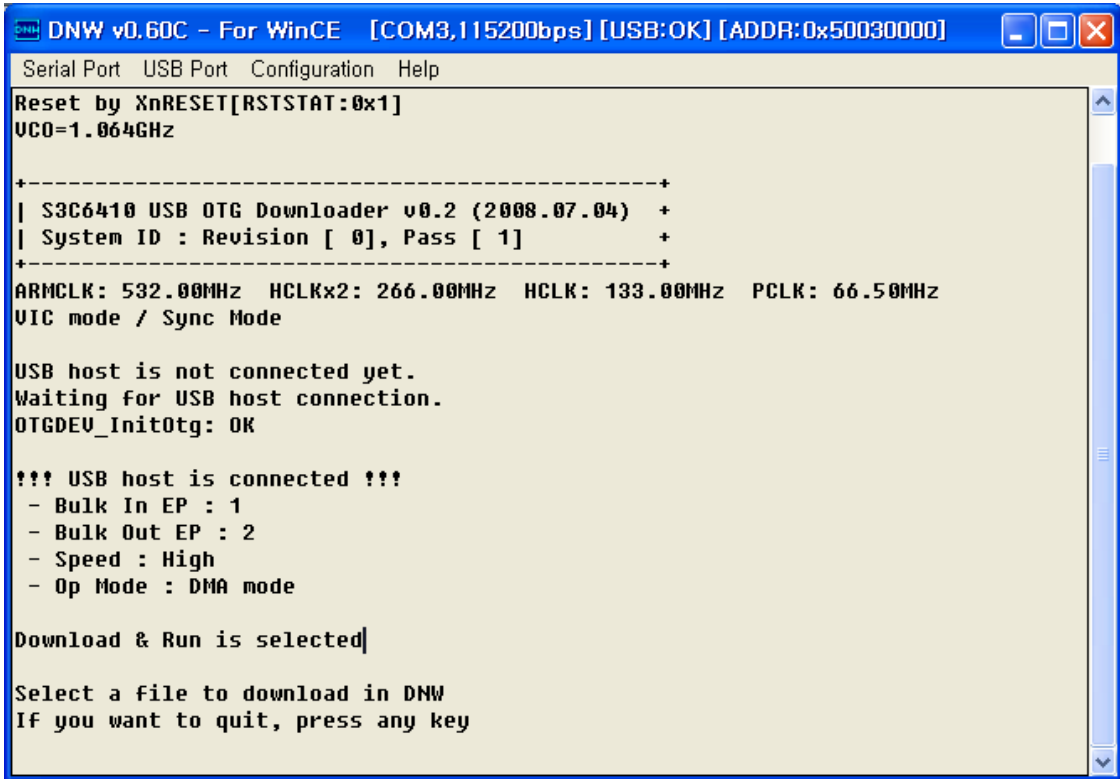


위와 같이 Log 창이 뜨면 아무 키나 눌러줍니다.

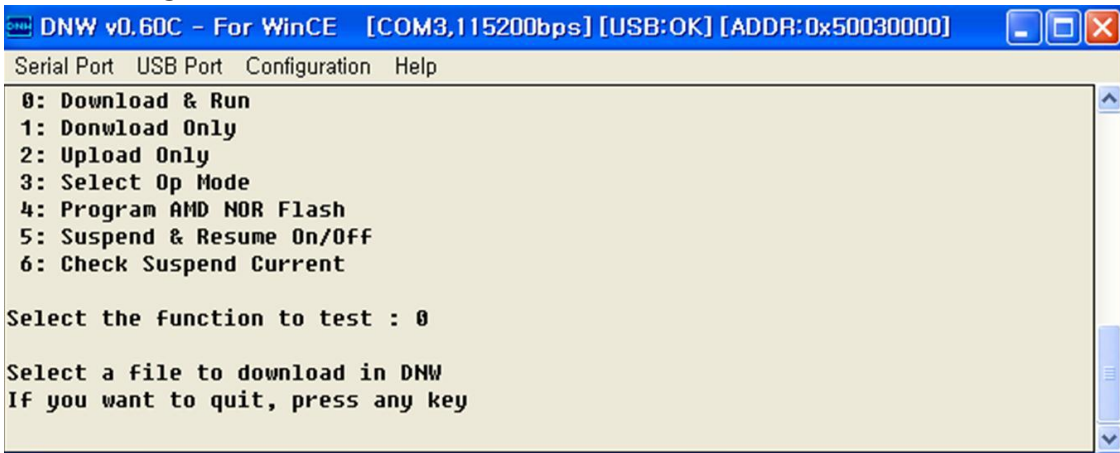

"0"을 선택후 엔터를 쳐주면 됩니다.

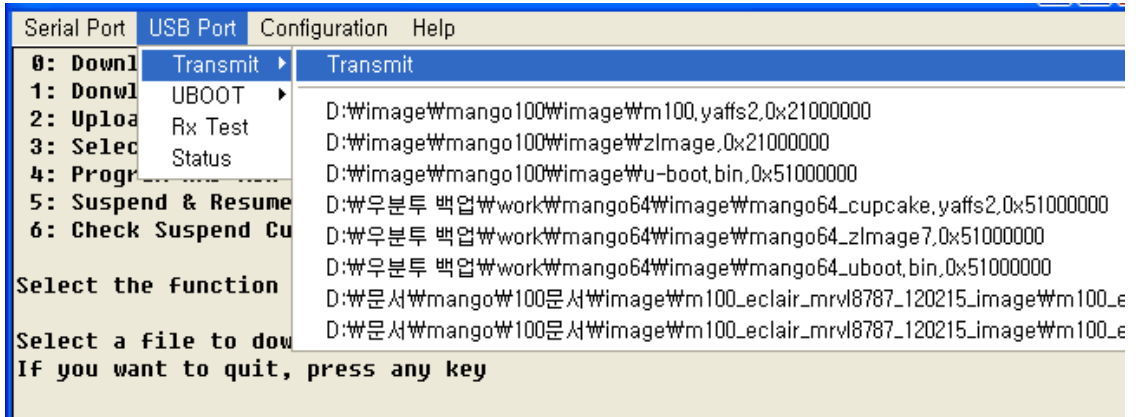

그후 Meun 창에서 USB Port > Transmit > Transmit를 선택합니다.

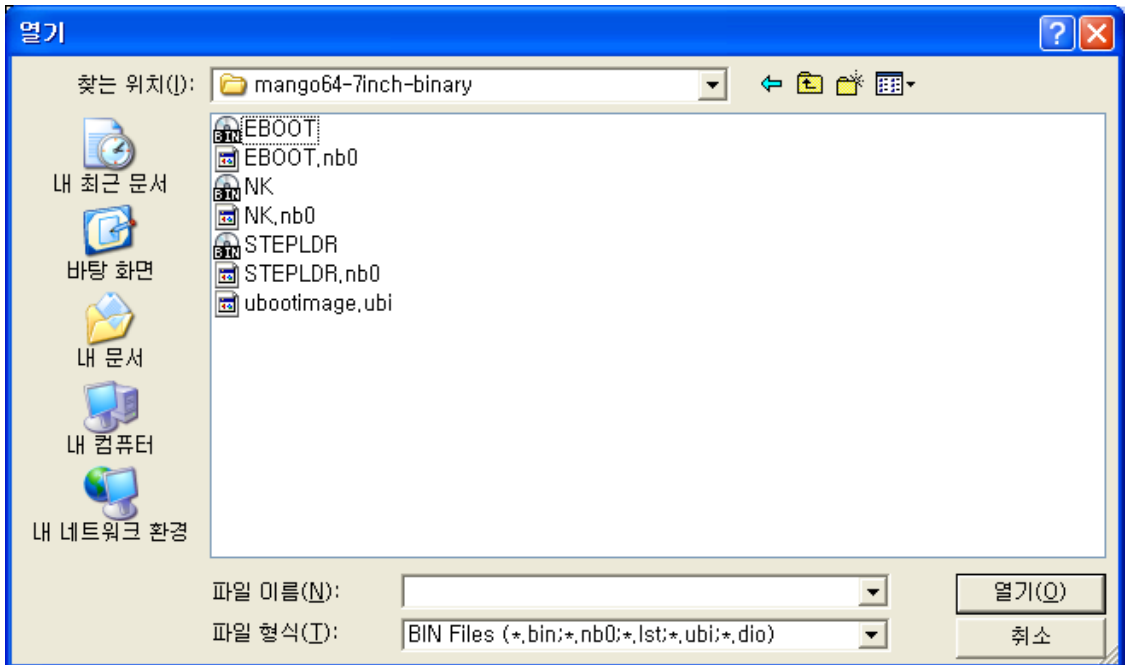

mango64-7inch-binary.zip 압축을 풀어 설치한 곳으로 가서 EBOOT.nb0를 선택하여 열어줍니다.